



PEDANE TOURING "WHEELIE"

- 1) rimuovere le pedane OEM;
- 2) allentare le viti di supporto pedane OEM (13) con una chiave a brugola da 5/16 ";
- 3) inserire i distanziali forniti come da disegno allegato;
- 4) installare le pedane Rebuffini e serrare le viti OEM (8) con una chiave a brugola da 3/16 "e una chiave a tubo da 7/16" con Medium Loctite®, lasciando comunque la possibilità di chiusura delle pedane.
- 5) infine serrare le viti OEM (13) con una chiave a brugola da 5/16 ".


P.S. tutte le viti delle nostre pedane sono già state serrate con Loctite® media.
Sono pronte per essere installate.



"WHEELIE" TOURING FLOORBOARDS

- 1) remove the OEM footboards;
- 2) loosen the OEM footboards support screws (13) with a allen wrench 5/16";
- 3) insert the spacers provided as per the attached drawing;
- 4) install the Rebuffini® footboards and tighten the OEM screws (8) with a allen wrench 3/16" and a socket wrench 7/16" with Medium Loctite®.
- 5) finally tighten the OEM screws (13) with a allen wrench 5/16"

P.S. all the screws of our footboards have already been tighten with Medium Loctite®.
They are ready to be installed.

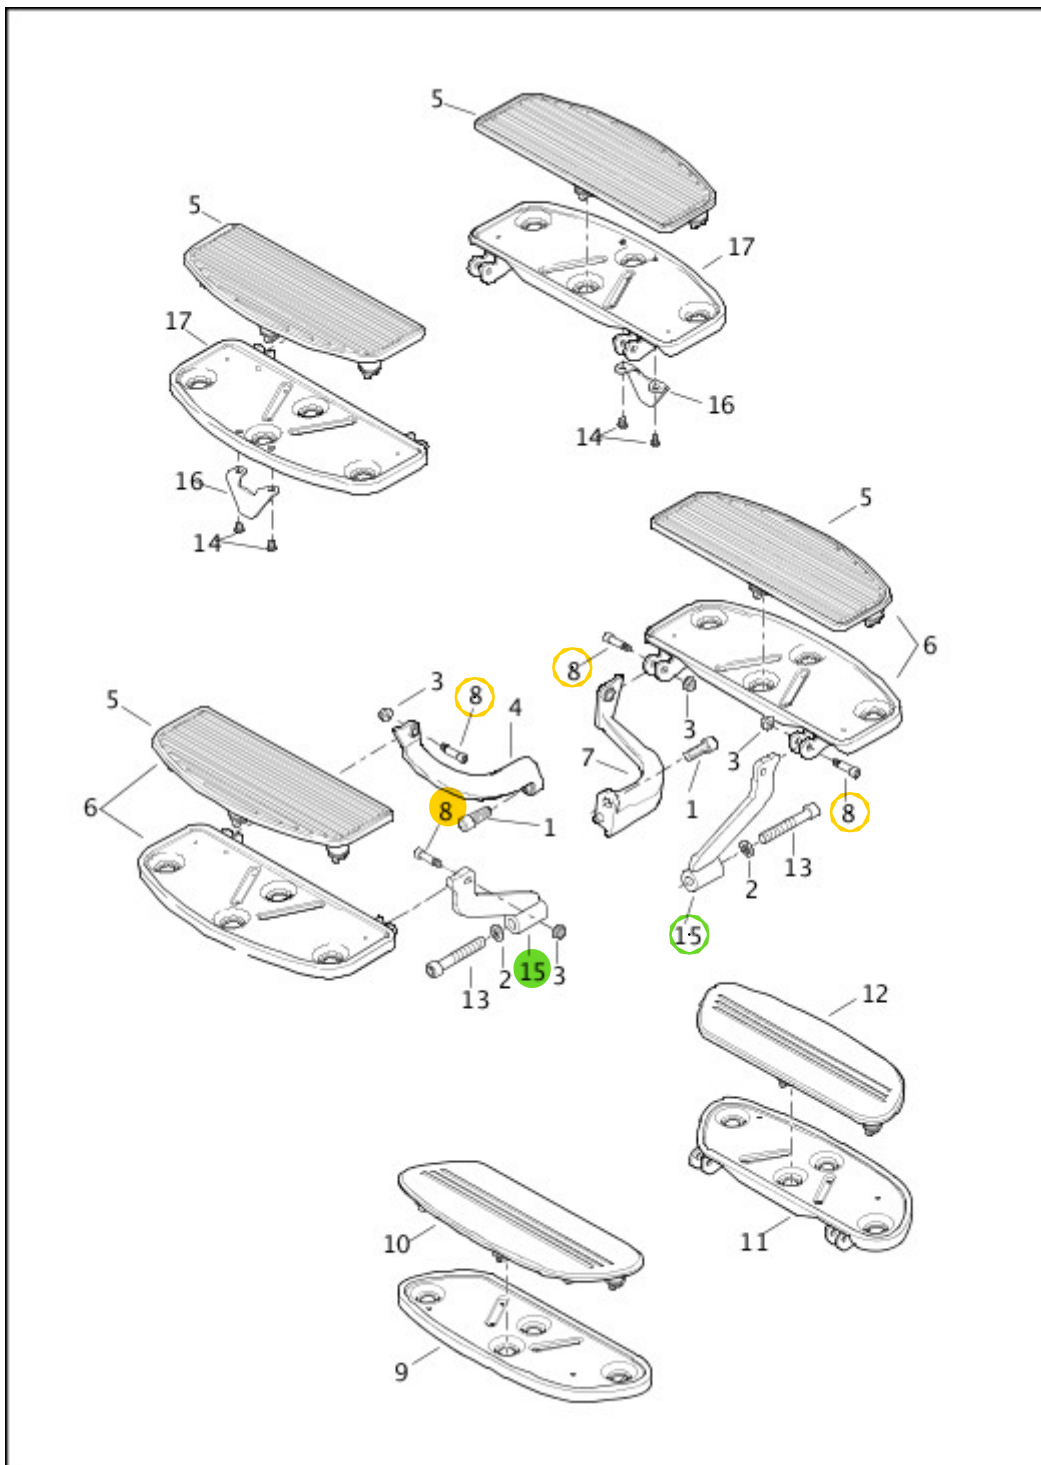

On 2023.5 and 2024 CVO™ Street Glide™, CVO™ Road Glide™, CVO™ Road Glide™ ST to install the Rebuffini Wheelie floorboards you must replace the OEM bolts "8" with the H-D™ #50674-05 x 4 pc .

On 2024 CVO™ Road Glide™ ST to install the Rebuffini Wheelie floorboards you must purchase the OEM mounts "15" H-D™ 47200302A x 2 pc.