

ABS Designer Series Single Disc - Upper Brake Line

Sizing & Measuring Guidelines

Dyna, Sportster, and 11-17 Softail - To determine the required length of your new upper brake line, measure from the point at which the soft line enters the crimp collar and follow the brake line routing up to your master cylinder. Magnum Shielding brake lines are designed to follow the same routing path as OEM lines. Use the images below to help.


2018 Softail - Upper line replacement when reusing the stock lower brake line. (**Adapter required**) Lengths are determined by using the stock master cylinder line for a guide. Measure from the lower brake line manifold where the upper line attaches up to the master cylinder. From that measurement, subtract 1.5" for the adapter and round up to the next number to determine upper line length. Use the images below to help with your measuring.



11-17 ABS Softail Measuring



ABS Dyna/Sportster Measuring

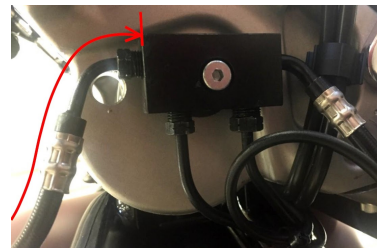

2018 Softail Measuring