



# FLARE™ WINDSHIELD FOR 2018+ SPORT GLIDE

**INCLUDED COMPONENTS:**

- Flare™ Windshield


**HELPFUL FOR INSTALLATION:**

- Torx Screwdriver  
- Clean cloths

**QUESTIONS?**



**EMAIL:**  
info@getklocked.com  
**CALL:** (605) 996.3700

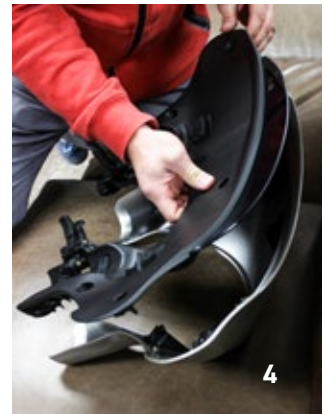

1. Protect painted surfaces
2. Release the two mount clamps around the forks **(Fig 1)**
3. Carefully remove the fairing assembly and place it painted side down on a clean soft cloth **(Fig 2)**
4. Remove the 7 torx screws that hold the fairing halves together and separate them **(Fig 3)**
5. Place the inner fairing on a clean soft cloth to be able to remove the windshield **(Fig 4)**
6. Remove the two mounting screws that hold the windshield in place **(Fig 5)**
7. Install your Klock Werks Flare windshield onto the mount points and torque the screws to factory specifications **(Fig 6)**
8. Reinstall the fairing components together **(Fig 7)**
9. Install the fairing on your Sport Glide and enjoy your new Klock Werks Flare™ Windshield! **(Fig 8)**

**WARNING!** Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192