

INSTALLATION INSTRUCTIONS

PRISM+ FLARE LIGHTS

2805

DOWNLOAD APP TO PHONE: KURYAKYN PRISM+

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|--------------|---|-------------------|
| 2 | Flare Lights | 1 | Dielectric Grease |
| 1 | Y-Connector | 6 | 4" Cable Ties |

YOU WILL ALSO NEED:

Phillips screw driver, metric or standard hex wrench set

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

NOTICE

REFER TO THE LAST PAGE OF THE INSTALLATION INSTRUCTIONS FOR L.E.D. COUNTS FOR EACH VARIATION OF PRISM+ LIGHTS. BLUETOOTH CONTROLLERS HAVE A MAX CAPACITY OF 250 L.E.D.S CONNECTED TO IT AT A TIME. MAX CAPACITY PER CHANNEL IS 100 L.E.D.S, BUT THE CONTROLLER SHOULD NEVER EXCEED A TOTAL OF 250 L.E.D.S CONNECTED TO IT.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

Note: This kit does not include a Bluetooth Controller. If motorcycle is not already equipped with a Prism+ Bluetooth Controller, one must be purchased separately, P/N 2468. Not compatible with Prism Bluetooth Controller.

STEP 2 Locate existing installed Prism+ Bluetooth Controller; or install the Prism+ Bluetooth Controller, or other Prism+ Light Kit, per the instructions provided with them. Be aware of the four different channels on the controller: front left, front right, rear left, and rear right.

STEP 3 Refer to FIG 1. Determine areas of the bike you wish to apply the Flare Lights to. Test fit the lights and extension of their cords before fully installing them.

Note: The diagram shows suggestions, not requirements, of where to install Prism+ Flare Lights. Be aware that if Flare Lights are installed using the front left or front right channels on the Bluetooth Controller, they will not have turn signal functionality.

STEP 4 Locate provided Y-Connector.

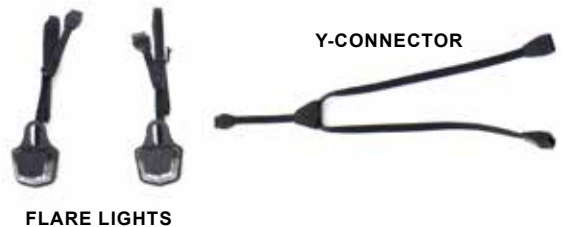


FIG 1

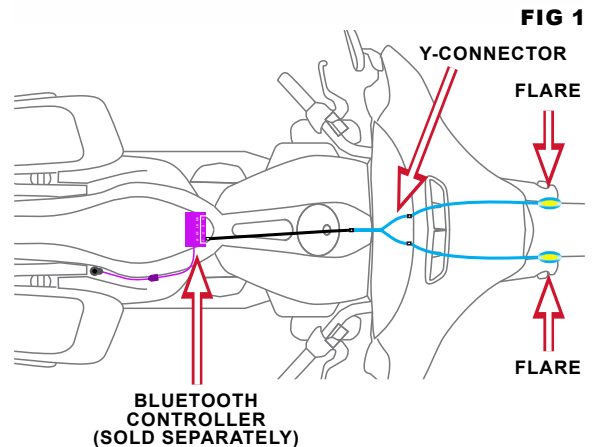


FIG 1

INSTALLATION INSTRUCTIONS

PRISM+ FLARE LIGHTS

2805

-CONTINUED-

- STEP 5** Connect the Y-Connector to a single front channel on the controller, front left or front right, or to a singular chain of Prism+ extension cords or lights that are connected to the front left or front right channel.

Note: Refer to PIC 3. Make note of the raised dot and the Kuryakyn K-shield logo on opposite ends on each part. When connecting cords to cords, cords to lights, or lights to lights be sure that the raised dot and K-shield logo are both visible when connecting. When parts are connected, the K-shield logos of those parts should be visible on the same side. If within your chain of cords and lights a shield is facing in the opposite direction, it is connected incorrectly.

- STEP 6** Connect the extension cords from the Flare Lights to the Y-Connector. Turn on the Bluetooth Controller switch, open the Kuryakyn Prism+ App on your phone, and pair the two devices. Test for proper function of the lights before fully installing them on your bike.

NOTICE

REFER TO FIG 2. IF FLARE LIGHTS ARE BEING INSTALLED ON THE FRONT OF A MOTORCYCLE, AND PASSING LAMPS OR A HEADLIGHT ARE BEING INSTALLED WITH IT, THEY NEED TO BE ON SEPARATE FRONT CHANNELS. SEE LAST PAGE FOR L.E.D. COUNTS AND ADDITIONAL INFORMATION.

- STEP 7** After testing the Flare Lights, disconnect them.

- STEP 8** Determine location of installment. Remove OEM mounting hardware. Align and place the Flare Light with the mounting hole and secure it in place using the OEM hardware that was removed. Adjust the flexible mounting bracket of the light as needed.

Note: Refer to PIC 4. The Flare Light has a flexible steel mounting bracket allowing them to be mounted to fender mounting bolts, chain/belt guard mounting bolts or any other convenient fastener.




- STEP 9** Apply a small amount of dielectric grease to each plug end of the Flare Lights. Route the cord accordingly and connect the Flare Lights to other Prism+ extension cords or lights, or the Bluetooth Controller.

- STEP 10** Test the function of the lights. Ensure all of the lights properly function before operating motorcycle.

- STEP 11** Secure all cords in a safe place. Ensure that cords are secured away from any moving parts, excessive heat or pinch points.

NOTICE

SECURE ALL WIRING AWAY FROM ANY MOVING PARTS, PINCH POINTS OR EXTREME HEAT. KURYAKYN WILL NOT ISSUE A WARRANTY ON ANY ELECTRICAL COMPONENT THAT FAILS DUE TO PINCHED, CRIMPED, BROKEN, ABRADED, MELTED OR FRAYED WIRES.

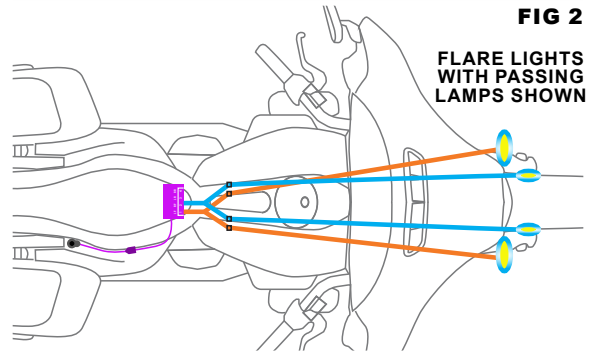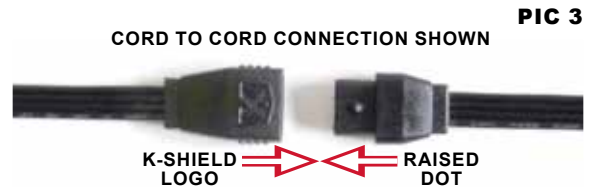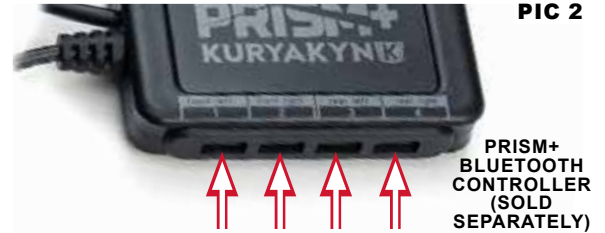

INSTALLATION INSTRUCTIONS

PRISM+ FLARE LIGHTS

2805

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of 0 emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

INSTALLATION INSTRUCTIONS

PRISM+ FLARE LIGHTS

2805

-CONTINUED-

NOTICE

REFER TO THE L.E.D. COUNT TABLE FOR EACH VARIATION OF PRISM+ LIGHTS. BLUETOOTH CONTROLLERS HAVE A MAX CAPACITY OF 250 L.E.D.S CONNECTED TO IT AT A TIME. MAX CAPACITY PER CHANNEL IS 100 L.E.D.S, BUT THE CONTROLLER SHOULD NEVER EXCEED A TOTAL OF 250 L.E.D.S CONNECTED TO IT.


PRISM COMPONENTS	L.E.D. COUNT
HEADLIGHT 7"	48
HEADLIGHT 5-3/4"	36
PASSING LIGHT 4-1/2"	24
ROULETTE	16
FLARE	8
4" STRIP	8
8" STRIP	16
POD*	8 L.E.D. COUNT (*4 CONTROLLER READ COUNT)

*The bluetooth controller reads a pod light as 4 L.E.D.s, even though they have a total of 8 L.E.D.s.

CREATING A SINGLE CHAIN OF PODS AND/OR STRIP LIGHTS:

Refer to FIG 1.1. Do not exceed the 100 L.E.D. maximum capacity per channel. Place a loop connector on the very end of the chain of lights.


FIG 1.1



CREATING A SINGLE CHAIN OF PODS AND/OR STRIP LIGHTS WITH A HEADLIGHT OR ROULETTE WHEEL:

Refer to FIG 2.1. Do not exceed the 100 L.E.D. maximum capacity per channel. Place Headlight or Roulette Wheel on the end of the chain.


FIG 2.1

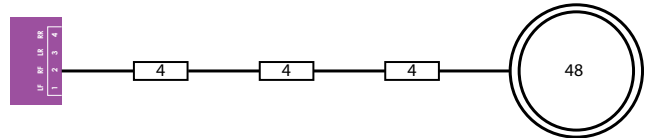

USING A Y-CONNECTOR WITH A HEADLIGHT, THE PASSING LIGHTS, A ROULETTE WHEEL, OR THE FLARE LIGHTS:


Refer to FIG 3.1. When Y-Connectors are used with a Headlight, the Passing Lights, a Roulette Wheel, or the Flare Lights, each branch of the Y-Connector needs to have the same amount of L.E.D.s to function properly. Lights can be placed before a Y-Connector as long as the 100 L.E.D. maximum capacity per channel is not exceeded.

FIG 3.1

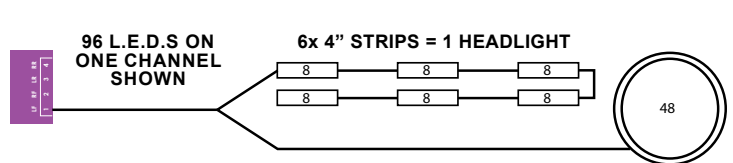

When balancing a branch using Pod Lights the controller reads them as 4 L.E.D.s, but the actual count is 8 L.E.D.s per Pod. The 8 count is used in the overall total of L.E.D.s on a channel. Make sure not to exceed the 100 L.E.D. maximum capacity per channel.


FIG 4.1

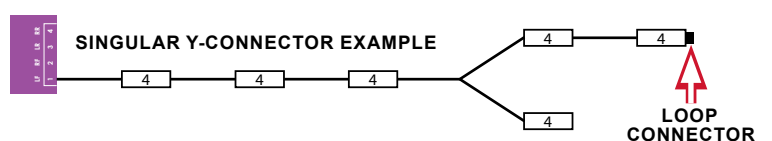

USING A Y-CONNECTOR WITH PODS AND/OR STRIP LIGHTS ONLY:

Refer to FIG 4.1 and 4.2. When using Y-Connectors, the branch with the most L.E.D.s on it needs to have a loop connector added to the end of it.

FIG 4.2

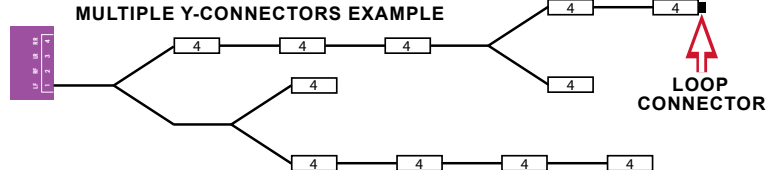

KURYAKYN.COM